



# Screen your calls while watching your screen!

YOUR EASY GUIDE TO TV CALL DISPLAY.

PLAY WATCH FUTURE MOVIES FREEDOM NEXT SPORTS ENTERTAINMENT ACTION WATCH FUTURE MOVIES cable EASY STUNNING MOVIES  
 ANYPLACE CONVENIENT NOTION WATCH FUTURE MOVIES cable EASY STUNNING MOVIES  
 breathhtaking LIVE ANYPLACE CONVENIENT NOTION WATCH FUTURE MOVIES cable EASY STUNNING MOVIES  
 FAVOURITE EXCITING



Creating World-Leading Internet Experiences.



## TV CALL DISPLAY

You're watching your favourite program on TV and the phone rings. Who is it? Should you answer? With TV Call Display, you can see who's calling so you can decide to answer or not. The choice is yours!

 
# SEE WHO'S CALLING, RIGHT ON YOUR TV

## Choice and control without getting up from the couch.

With TV Call Display, when your phone rings, a banner will automatically pop up on your TV screen to show you the caller's name and phone number. Using your Rogers remote, you can choose to snooze TV Call Display or redirect the call to voicemail (if you subscribe to Rogers Voicemail). It's that easy.

TV Call Display is included at no extra charge when you subscribe to Rogers Digital TV and Rogers Home Phone with Call Display.

## A QUICK GUIDE TO TV CALL DISPLAY

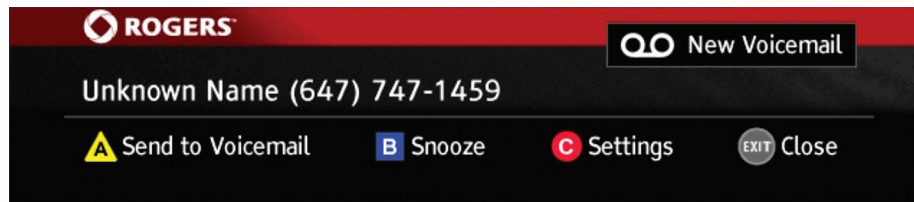

### How to use your Rogers remote to manage TV Call Display

#### Send calls to voicemail (take a message)

Press **A** to send calls directly to voicemail (if you subscribe to Rogers Voicemail).


#### Snooze (don't want to be interrupted)

Press **B** to temporarily disable future call detail pop-ups (note, the phone will keep on ringing). The default snooze duration is 2 hours.

#### Settings (customize TV Call Display)

Press **C** to access the TV Call Display Settings and change the default settings.

#### Voicemail (messages waiting)

The voicemail icon  appears as part of the TV Call Display pop-up banner if you have unheard Rogers Voicemail messages. It can also appear on its own when a new voicemail message is received. The default for a new voicemail message notification is Off.

#### Close (close the pop-up call details)

Press **EXIT** to instantly close the pop-up call details. The default Call Display pop-up banner display duration is 20 seconds.

#### NOTES:

- Your Rogers remote buttons will only work with your TV Call Display when the pop-up banner is visible.
- You can continue to retrieve your voicemail messages through your phone or by email /MMS with Online-Voicemail.



## CUSTOMIZE TV CALL DISPLAY

**Go to channel 975 to customize features and view call logs.**

TV Call Display is preset with the following defaults:

**Call Display Pop-up Display Duration:** 20 seconds

**New Voicemail Message Pop-up:** Off

**Snooze Setting:** 2 hours

**TIP** To turn off the Call Display Pop-up banner, see **how to change the Call Display Pop-up duration** under Advanced Controls.



## VIEW YOUR CALL LOGS

 
ROGERS				
	NAME	NUMBER	DATE	TIME
<b>View Call Logs</b>	Unknown Name	(647) 747-1461	08/27/12	10:32 AM
	Unknown Name	(647) 747-1461	08/25/12	11:50 AM
Manage Call Display Pop-Up	Unknown Name	(647) 747-1453	08/24/12	3:36 PM
	Unknown Name	(647) 747-1453	08/24/12	3:35 PM
Manage Voicemail Pop-Up	Unknown Name	(647) 747-1457	08/24/12	3:16 PM
	Unknown Name	(647) 747-1461	08/24/12	11:15 AM
Manage Snooze Settings	Unknown Name	(647) 747-1453	08/24/12	10:44 AM
	Unknown Name	(416) 554-5006	08/23/12	6:22 PM
	Unknown Name	(416) 554-5006	08/23/12	6:22 PM

**See your last 10 callers and call details.**

To view your Call Log, just tune in to channel 975. This feature is on all the time. You don't have to be watching TV, and your digital box doesn't have to be turned on.

**NOTE:** Call Logs cannot be deleted.


# ADVANCED CONTROLS

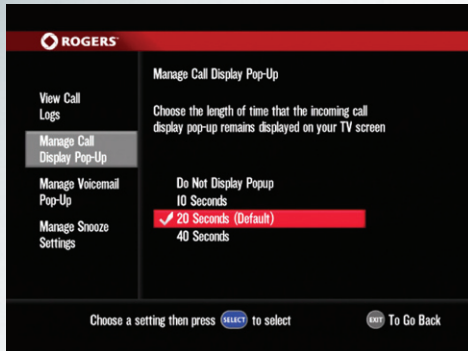

## To change the Call Display Pop-up display duration:

1. Tune to channel 975.
2. Press and highlight **Manage Call Display Pop-up**.
3. Press and highlight pop-up settings.
4. Press to highlight the desired duration: Off, 10, 20 (Default), or 40 seconds.
5. Press to save your choice.

 
**NOTE:** If you have multiple digital boxes, you will need to customize the TV Call Display settings on each TV.

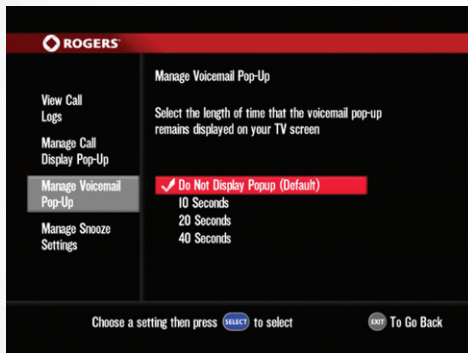

## To change your Voicemail Pop-up display duration:

1. Tune to channel 975.
2. Press and highlight **Manage Voicemail Pop-up**.
3. Press and highlight pop-up settings.
4. Press to highlight the desired duration: Off (Default), 10, 20, or 40 seconds.
5. Press to save your choice.

 **NOTE:** Voicemail Pop-up is only available if you subscribe to voicemail on your Rogers Home Phone.

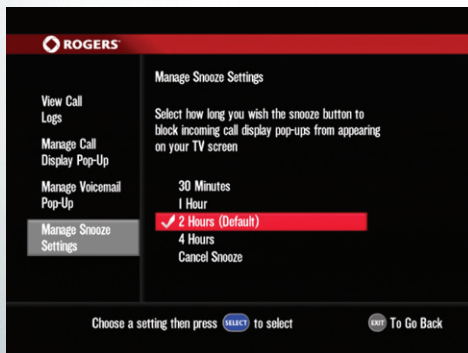

## To change the Snooze Setting:

1. Tune to channel 975.
2. Press and highlight **Manage Snooze Settings**.
3. Press and highlight pop-up settings.
4. Press to highlight the desired duration: 30 minutes, 1 hour, 2 hours (Default), 4 hours, or Cancel Snooze (enables Call Display pop-up banner for the next incoming call).
5. Press to save your choice.

- TIP**
- If you're recording a show with your PVR, the pop-up banner will not be recorded.
  - If you're recording a show with a VCR or DVD recorder, the pop-up banner will be recorded. When using these recording devices, activate the **Snooze** setting while the TV Call Display pop-up banner is on screen. This will disable pop-ups until recording stops.

To learn more about TV Call Display,  
Rogers Digital TV and Rogers Home Phone,  
visit **[rogers.com/tvcalldisplay](http://rogers.com/tvcalldisplay)**  
or call **1 888 ROGERS1 (764-3771)**