Samsung GALAXY Tab



It's time to Tab.

- Thin, Light, Stylish
- Complete Google™ Experience With Honeycomb
- · Entertainment and Productivity
- Samsung Experience





TOP FEATURES









Thin, Light, Stylish

Boasting a high-resolution Super Clear LCD screen and measuring less than 9mm thin, the Galaxy Tab 10.1 offers the ultimate tablet experience in a stylish, durable package that always makes a statement. Soft edges are easy and comfortable in-hand, and at 565 grams, the Galaxy Tab 10.1 is light and completely portable.

Complete Google Experience With Honeycomb

The tablet-optimized Android™ 3.1 (Honeycomb) operating system gives Galaxy Tab 10.1 an intuitive user interface featuring:

- · System Bar for status notifications.
- · Action Bar for total application control.
- Task Switcher that always keeps recently used apps close at hand for better multitasking.
- Connectivity for USB devices and support for joysticks and game pads (with optional accessory).
- Hands-free Voice Integration with Google Services like Search and Maps.

Entertainment and Productivity

- The dual core 1GHz processor runs every function and app effortlessly.
- View, record, and send video in full 720p HD.
- Tab 10.1 offers a higher pixel per inch ratio than the leading competitor, and less frame around the edge of the screen provides better video viewing and web browsing.
- Access Flash® movies and websites thanks to the Flash-enabled Android browser.
- Dual speakers provide immersive sound quality, so games and videos sound just like they were intended to sound.
- Full Microsoft Office® capabilities thanks to Polaris® Office.
- Over 250,000 apps and games designed for productivity and entertainment are available from Android Market[™].

Samsung Experience

Get the best in user experience with Samsung TouchWiz™ as well as exclusive Samsung Hub Services pre-loaded right out of the box.

- TouchWiz offers useful features such as Live Panel, an improved widget drawer of exclusive, resizable widgets such as AccuWeather and Buddies.
- An enhanced Notification Bar toggles Wi-Fi, GPS, Notifications, and Auto Rotation, for easy access.
- Social Hub encourages you to be as social as you want to be, by syncing contacts across various platforms.
- Download the latest tracks through Music Hub, or store your own music for on-the-go listening.



SECONDARY KEY FEATURES

Wi-Fi Dual Antennas (2.4GHz & 5GHz)

Provides an enhanced, stable, multi-channel Wi-Fi connection for smooth internet browsing.

Live Panel

Customize the home screen and get live updates with resizable widgets that display useful information like agenda, weather, and news.

Mini Apps & Tray

One-touch quick-launching pad for utility apps such as calculator, memo, and calendar accessible from any screen or app currently running.

Music Hub

Get access to the best new music with Music Hub. Browse and download music, or use Music Hub to store and organize existing music.

Social Hub

Connecting with friends and family is easy with Social Hub, Galaxy Tab 10.1's all-in-one calendar, contact list, and inbox. Sync phone and email contacts with social networking sites and prioritize information based on user preference.

Polaris Office

This handy app comes pre-loaded to allow for maximum user productivity. Create, open, and edit Microsoft® Office documents like Word, PowerPoint®, and Excel®, with 100% compatibility.

Exchange ActiveSync

Exchange® ActiveSync Support is the standard for corporate wireless email, and Galaxy Tab 10.1 works with ActiveSync to ensure that business users always have secure and reliable access to business email, calendar, contacts, and tasks.

ActiveSync on Galaxy Tab 10.1 allows business users to efficiently and securely administer mobile-based corporate messaging across the organization, with comprehensive support for up to 50 EAS IT policies and secure connectivity.

On Device Encryption

On Device Encryption (ODE) is an enhanced security feature on Samsung Android devices that offers complete device data encryption, plus optional SD card encryption and FIPS 140-2 Certification.

TIPS AND TRICKS

Adding Exchange® Email

To add a corporate Microsoft Exchange email account, follow these simple steps.

- From any home screen, select **Apps > Email**.
- Enter the corporate email address and password.
 Touch Next.
- Under Account Type, select Microsoft Exchange ActiveSync.
- If prompted, complete the requested information, such as the domain name and server name. Touch Next.
- Read the prompt, and touch **Ok** if you agree.
 Follow the remaining prompts to establish your business email account on Galaxy Tab 10.1.

Adding Webmail to Galaxy Tab 10.1

To add webmail to the Galaxy Tab 10.1:

- On any home screen, touch Apps > Email.
- Enter email address and password. Touch Next.
- When prompted, alter any account options as desired.
 Touch Next.
- Enter an option name for the account (eg. Personal Email) and enter the name that should appear in the "from" field. Touch Next.



TIPS AND TRICKS

Adding a Calendar to Galaxy Tab 10.1

Syncing any calendar with Galaxy Tab allows you to view any schedule on the go.

- On any home screen, touch **Apps > Calendar**.
- Once opened, select the Menu icon in Calendar.
 Touch Settings > Add Account.
- Choose the account to add from the list, then enter user name and password. Touch Sign in.
- · After reading the prompt, touch Done.

Access Android Market and View Featured Apps

Android Market allows Galaxy Tab 10.1 users to completely customize the device with apps and games for entertainment, connectivity, and productivity.

- To begin, touch Apps > Market.
- When prompted, Accept the Terms of Service.
- · Touch the Market icon again.
- The Android Market home page will automatically display the featured tablet apps.
- To search for a particular app, use the search bar and type in the keyword or app name.

Backing up Applications

Backing up applications is important for transferring devices or restoring device data.

- To back up Galaxy Tab 10.1's applications, touch
 Apps > Settings > Privacy > Back up my data.
- Touch **Back up my account**, and select the Google account the data should be backed up to.
- Touch Automatic restore to back up settings to apps in the event that they need to be reinstalled.

Setting up Wi-Fi

Connecting to Wi-Fi on Galaxy Tab 10.1 is simple and always fast.

- To get started, touch the bottom right-hand corner of the screen to display the Quick Panel.
- Then, touch the network bar.
- Touch Wi-Fi > Turn on Wi-Fi.
- Select the desired Wi-Fi network and enter the password if necessary.
- When finished, touch the **Home** button.

Adding Widgets to the Home Screen.

Samsung Galaxy Tab 10.1 allows you to add handy, resizable widgets to any home screen. These widgets can conveniently display weather, news, agendas, and more, right on the home screen.

- Touch and hold the home screen to bring up the menu.
- Touch Widgets, then scroll left and right to view the widget gallery.
- Select the desired widget and then drag and drop it onto the desired home screen.
- To move a widget, simply touch and hold until the device vibrates, then drag to any area of the home screen.
- To resize a widget, touch and hold until the device vibrates.
 Then, touch and drag any corner or side of the widget to adjust the size.

TOP DEMOS



Mini Apps Tray

Galaxy Tab 10.1 offers seven mini apps for all your essential needs. The Mini Apps Tray is always accessible, even within apps, for instant multitasking.

- To access the Mini Apps Tray, touch and swipe up on the bar at the bottom of the screen.
- The Mini Apps Toolbar will display the Task Manager, Calendar, World Clock, Music, and more.



TOP DEMOS











Multi-Tasking on Galaxy Tab 10.1

Galaxy Tab 10.1 allows users to keep more than one app open at a time, and TouchWiz offers seamless transition between apps.

- In order to view all running apps from any screen, touch the sidebar menu icon on the bottom left-hand side of the screen.
- Swipe up and down through the menu to view open apps.
- To launch a new app from within an app that's already running, touch and hold the sidebar menu icon until the app menu appears. Choose from All or My apps and select the desired app icon.

Using ScreenCapture

Galaxy Tab 10.1 makes it fast and easy to create screen grabs in one simple step.

- To create a screen capture, touch the ScreenCapture icon at the bottom left-hand corner of the screen.
- The screen will flash slightly to confirm that the screen grab has been taken.
- To locate the image, go to Apps > My files > ScreenCapture.

Customize the Home Screen

The Galaxy Tab 10.1 can be customized to suit any preference. Choose custom or preloaded wallpapers, add bookmarks to the home screen, or add app shortcuts.

- To view options for customization, touch and hold anywhere on the home screen.
- A menu will appear. Choose from Widgets, App shortcuts, Wallpapers, and More.

Music Hub

Music Hub is a great way to discover music and download tracks and albums right to the Galaxy Tab 10.1!

- Access Music Hub from the apps menu. Go to Apps > Music Hub.
- To browse new and featured music, select **Featured**.
- To browse music by genre, select **Genres** and swipe up and down on the list on the left-hand side to view available options.
- Touch the **Search** icon to browse music by keyword search.

Social Hub

Social Hub offers a handy overview of all social activity by aggregating notifications and messages from SNS sites like Twitter and Facebook.

- To activate Social Hub, go to Apps > Social Hub.
- Select Add Account.
- Choose an SNS account to sync and when prompted, Accept the Terms and Conditions.
- Follow the prompts to continue setting up the SNS account. You are encouraged to sync multiple accounts to get the most out of Social Hub.

To view how-to videos for the Galaxy Tab 10.1, visit www.samsung.com/spsncanada



INCLUDED IN THE BOX

- · Travel Adapter
- · USB Data Cable
- Stereo Headset
- · Quick Start Guide

AVAILABLE ACCESSORIES

- Keyboard Dock
- Desktop Dock
- Book Cover
- Pouch

- · HDTV Adapter
- USB Connection Kit
- Bluetooth Keyboard with Base

TECH SPECS

- Network: 850+1900+2100MHz HSPA, 850+900+1800+1900 GSM/GPRS/EDGE (GT-P7500 only)
- Operating System: Android 3.1 Honeycomb
- Battery life: Up to 9 hours (video) and up to 72 hours (music)
- Display: 10.1" WXGA TFT LCD
- Dimensions: 256.7 x 175.3 x 8.6mm
- · Standard 7000 mAh Li-Ion Battery
- · Weight: 565g
- Speed: Upload 5.8Mbps, Download 21Mbps HSPA+ (GT-P7500 only)

- Internal Memory: 16GB
- Music Player (MP3, AAC, AAC+, eAAC+, WMA, RA)
- Video Player (Full 1080p HD playback at 30fps, WMV9, WMV7, WMV8, H.264, MPEG4, Xvid, DivX, H.263, VP8)
- · Rear Camera: 3.0MP AF with LED Flash
- · Front Camera: 2.0MP
- Bluetooth® 3.0
- Wi-Fi 802.11 a/b/g/n Connectivity



